

BULKHEAD FITTING INSTALLATION INSTRUCTIONS SKU: 5276-BK

1. Drill a 1-5/8" diameter hole in the side of the unit at the desired location. The hole must be at least 2" from the floor.
2. Insert the bulkhead plug and gasket through the hole from the inside of the unit.
3. Thread the bulkhead nut onto the bulkhead plug from the outside of the unit. Tighten the bulkhead nut.
4. Insert the cap plug with o-ring into the bulkhead fitting and tighten to 25 in-lb.
5. To drain the unit simply unscrew the cap plug.

