

Stinger Self-Rising Berm Instructions

1. If a Ground Pad has been purchased (sold separately), roll out the Ground Pad before unfolding the berm.
2. Unfold berm to lay flat (position on top of Ground Pad if purchased).
3. If a TracMat (sold separately) was purchased, unroll the TracMat inside the berm, this mat should be positioned to align with vehicle tires.
4. The foam walls should lay flat towards the interior of the berm.



Note: Vehicles can enter and exit from ALL sides of this berm.

The foam walls will automatically rise during a spill.

