

Stinger Spillpal Berm Instructions

For Black Diamond Stinger Spillpal Foam Wall Berms

1. If a Ground Pad has been purchased (sold separately), roll out the Ground Pad before unfolding the berm.
2. Unfold the berm to lay flat (position on top of Ground Pad if purchased).
3. Ensure berm is positioned correctly before inserting foam logs. The foam wall sleeve pockets should be on the OUTSIDE of the berm:



4. Once berm has been confirmed to be in the correct position, then insert foam logs into each perimeter sleeve, and continue until all foam logs have been inserted.



5. If a TracMat (sold separately) was purchased, unroll the TracMat inside the berm. This mat should be positioned to align with vehicle tires.

Note: Sidewalls do NOT need to be removed for vehicle entry and exit. Vehicles can enter and exit from ALL sides of this berm.

Watch the Stinger Spillpal Berm set up on YouTube:

<https://www.youtube.com/watch?v=tehnx71zylA>