
1-800-936-7229
www.enpac.com

Product Instructions

IBC Spill Pallet

SKU: 5469

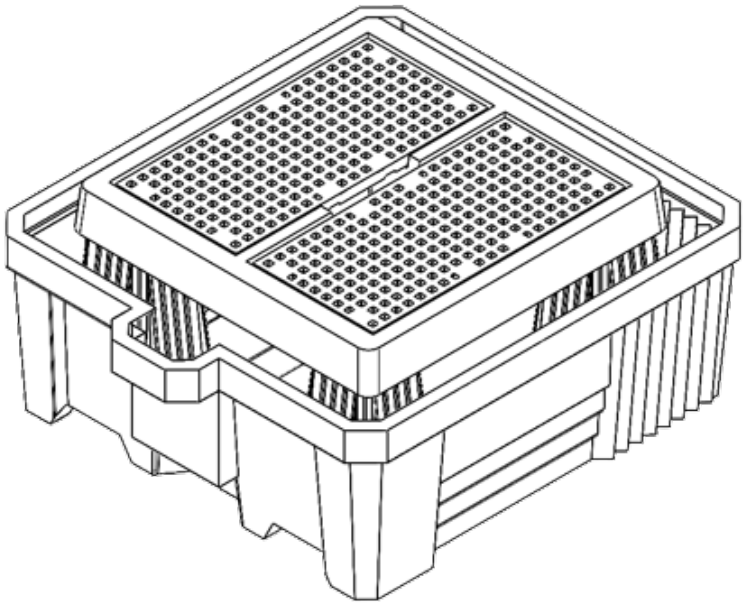

Important Information

- The spill pallet **must** be placed on a solid, level surface, and be able to withstand the following loads:
  - Yellow Version: 8,000 lbs. (3,628 kg.)
  - Black Version: 3,000 lbs. (1,360 kg.)
  - The load capacity is based on a Uniformly Distributed Load (UDL.)
- Ensure that the unit is assembled correctly with each use. Instructions are available on our website.
- Failure to follow the instructions will void all warranties.


Parts Included

- (1) Sump (Part A)
- (1) Pallet Pedestal (Part B)
- (2) Grate (Part C)

Assembly Instructions


1. Watch this unit being assembled at youtube.com/watch?v=-J8Oz05RcLE
2. Position the sump (Part A) with the dispensing bucket facing forward, or out, where it can be accessed.
3. Add the pallet pedestal (Part B) evenly on the towers within the sump (Part A).
4. Add the grates (Part C) on to the pallet pedestal (Part B). (See Fig. 1)

Fig. 1

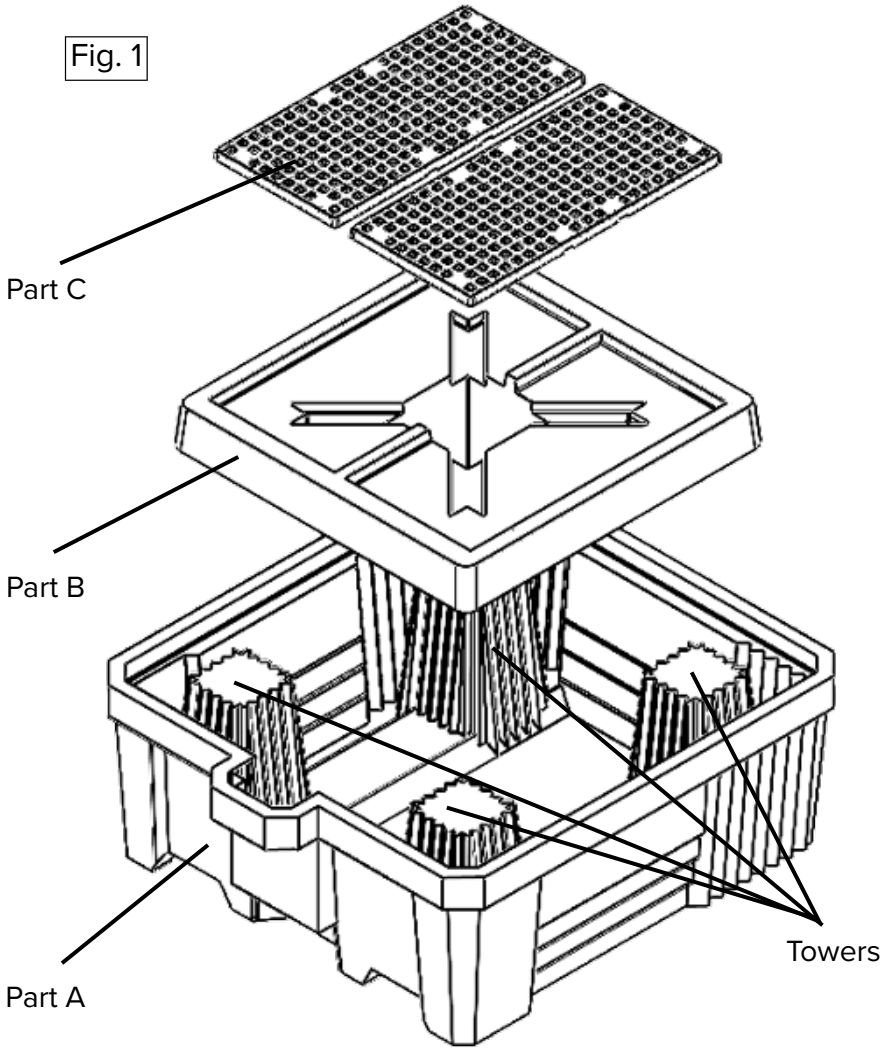


5. Be sure to load and unload IBC totes from any of the three sides. Do **NOT** load from the front with bucket area. The IBC tote must be placed **evenly** on the spill pallet. The load capacity is based on a Uniformly Distributed Load (UDL). (See Fig. 2) Do **NOT** stack more than two IBC totes high.


Fig. 2

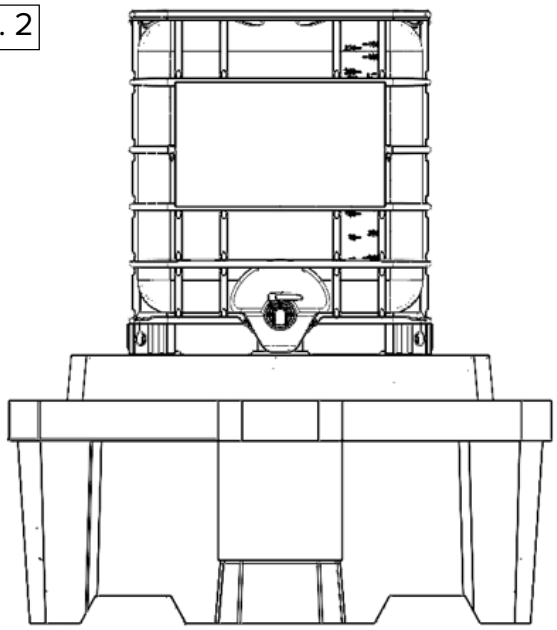

6. **Do <u>NOT</u> move the spill pallet when loaded.** (See Fig. 3)

Fig. 3

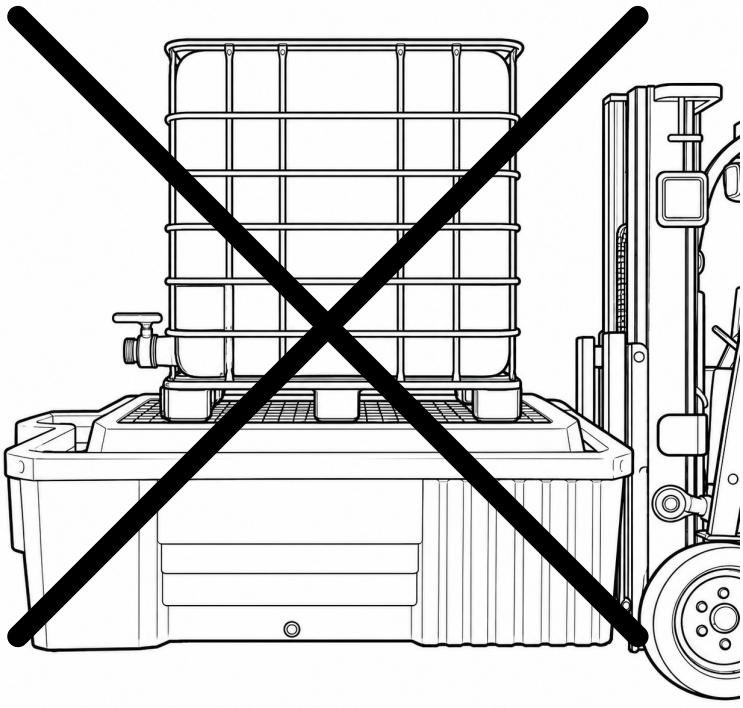

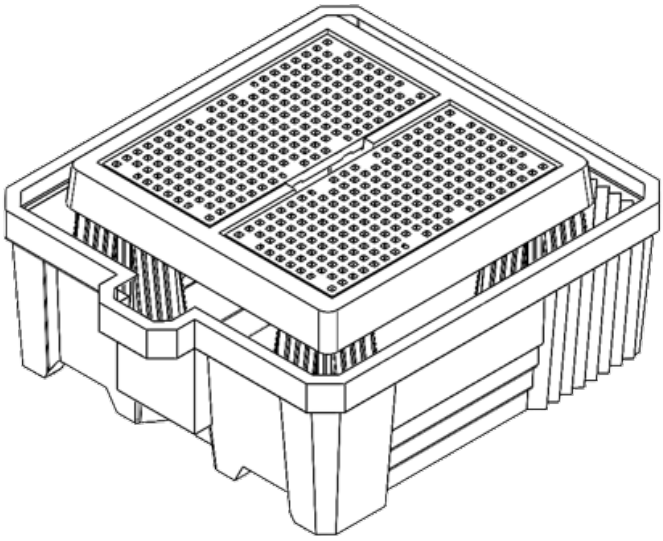

Questions? 1-800-936-7229 or info@enpac.com for support