

## Frameless Storm Sentinel® Catch Basin Insert - Cone Style



Part Number	Description	Dimensions in. (cm.)	Absorption Capacity gal. (L.)
4320	Sediment, Trash, & Debris	36x48 (91x122)	N/A
4326	Sediment, Trash, & Debris	60x60 (152x152)	N/A
4320-NO	Sediment, Trash, & Debris, No Overflow	36x48 (91x122)	N/A
4326-NO	Sediment, Trash, & Debris, No Overflow	60x60 (152x152)	N/A
4320-IB	Sediment, Trash, Debris, & Oils	36x48 (91x122)	0.23 (0.87)
4326-IB	Sediment, Trash, Debris, & Oils	60x60 (152x152)	0.23 (0.87)

### Installation:

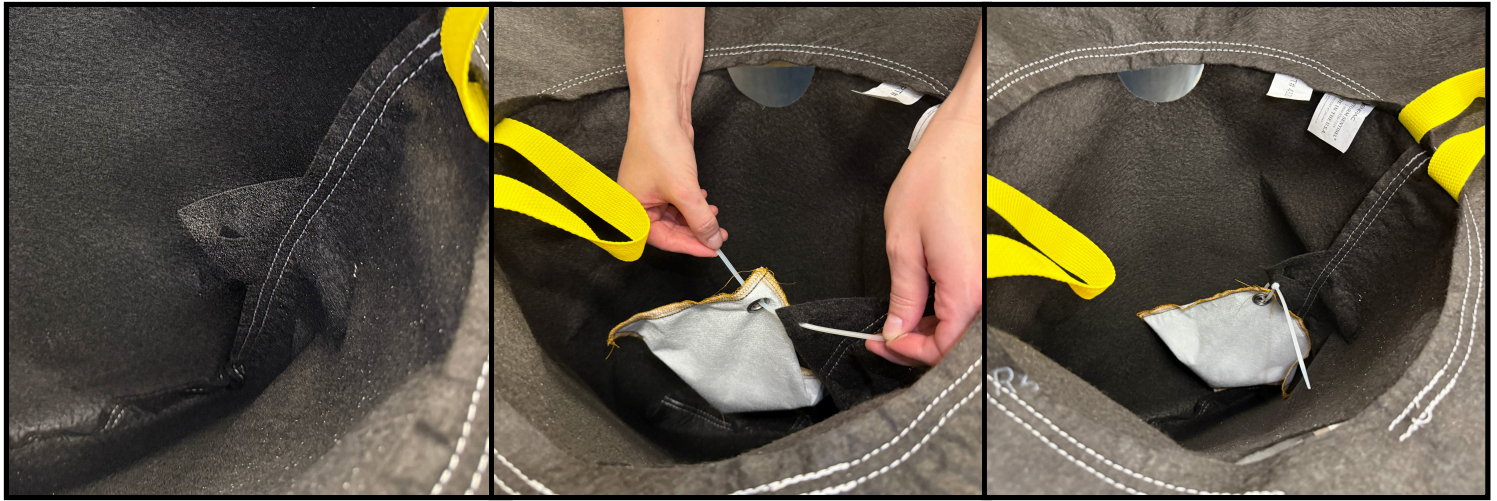
1. Remove catch basin grate.
2. Clean dirt and debris from grate and basin edges.
3. Position filter in center of basin, keeping weight on the excess fabric around the perimeter of the basin.
4. Reinstall grate. To ensure maximum effectiveness, fabric of filter should be fully captured between grate and edge of basin.
5. If desired, use a utility knife to cut excess fabric around the grate.





**Installation (oil-absorbing packet):**

1. If oil version was purchased (-IB), oil absorbing packet is already attached.
2. If standard version and oil packet were purchased separately, installation is required.
3. Locate triangular tab in Storm Sentinel cone.
4. Insert zip-tie through grommet in oil-packet and then through the hole in triangular tab.
5. Secure zip-tie and cut excess tie material (if desired).
6. To remove a fully saturated packet, cut zip tie and replace with a new packet.

**Removal:**

1. Prior to removing grate, locate yellow lifting straps beneath the grate.
2. Using your fingers (gloves recommended) or a grate hook, reach through the openings in the grate and pull lifting straps up through the grate.
3. Insert rebar, grate hook, or other available rod through both lifting straps to secure the filter to the grate.
4. Remove the grate. Filter will remain attached to the grate.
5. Dispose of contaminated Storm Sentinels® according to all local, state and federal regulations. Contact your local disposal authority for more information.
6. Replace and install new filter.



Watch the Frameless Storm Sentinel Catch Basin Insert  
Installation Instructions on YouTube:

<https://www.youtube.com/watch?v=pRI9KPzoafU>