



Stinger Snap-Foam Berm Instructions

For Stinger Snap-Foam Berms

1. If a Ground Pad has been purchased (sold separately), roll out the Ground Pad before unfolding the berm.
2. Unfold the berm to lay flat (position on top of Ground Pad if purchased).
3. Unfold the triangular stays and insert free end into bottom stay pockets.

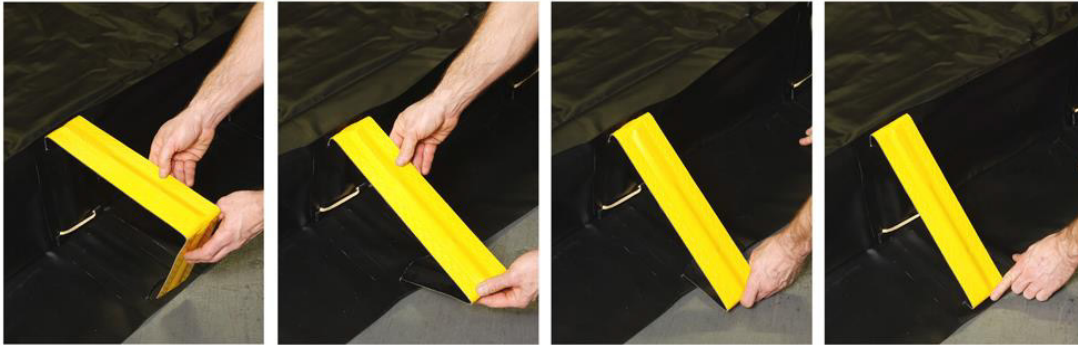

4. Continue until all stays are inserted into corresponding pockets.
5. If a TracMat (sold separately) was purchased, unroll the TracMat inside the berm. This mat should be positioned to align with vehicle tires.
6. Berm may require adjusting for the sidewalls to sit upright.

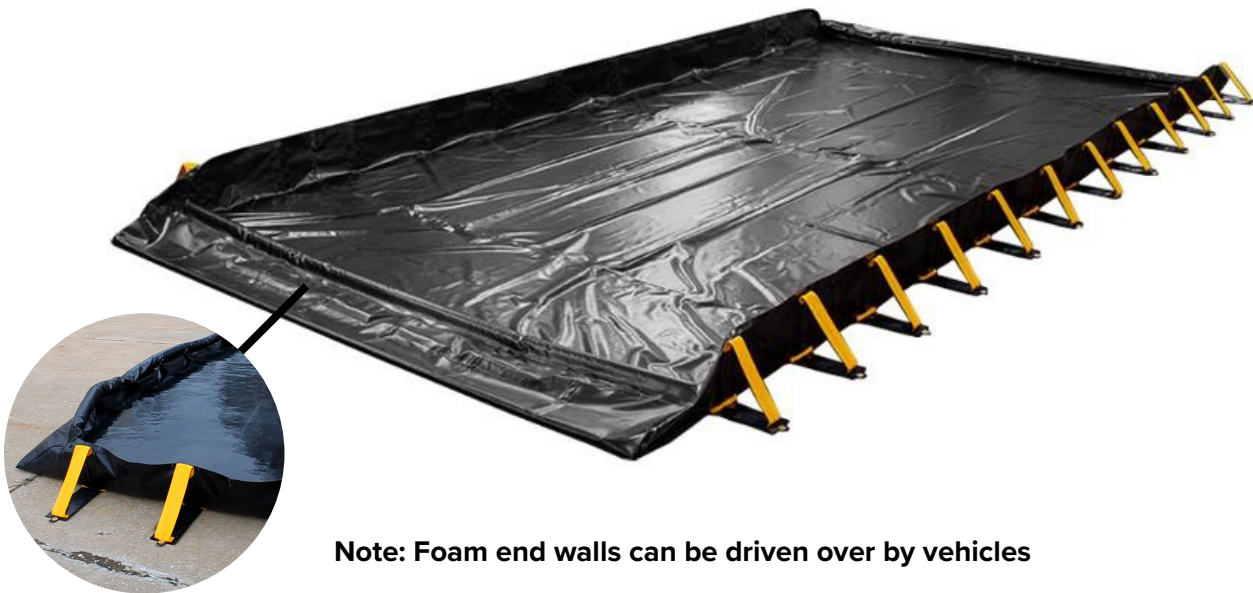

Note: Foam end walls can be driven over by vehicles

Watch the Stinger Snap-Foam Berm set up on YouTube:

<https://www.youtube.com/watch?v=0PnnyfKx7QM>