


Stinger Snap-Up Berm Instructions

For Black Diamond's Snap-Up PVC, Stinger Snap-Up,
and Stinger Yellow Jacket Berms

1. If a Ground Pad has been purchased (sold separately), roll out the Ground Pad before unfolding the berm.
2. Unfold the berm to lay flat (position on top of Ground Pad if purchased).
3. Unfold the triangular stays and insert free end into bottom stay pockets.

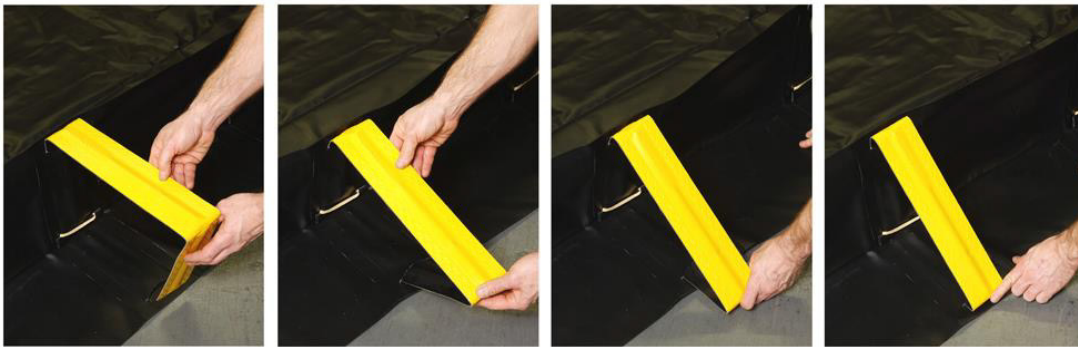

4. Continue until all stays are inserted into corresponding pockets.
5. If a TracMat (sold separately) was purchased, unroll the TracMat inside the berm. This mat should be positioned to align with vehicle tires.
6. Berm may require adjusting for the sidewalls to sit upright.



Note: Triangular Stays MUST be disassembled and flattened for vehicle entry and exit. Once vehicle has entered the berm, the stays should be put back into pockets for full containment.

Watch the Stinger Snap-Up Berm set up on YouTube:
<https://www.youtube.com/watch?v=JYydQ3S3h8U&t>