

TOTE BIN WITH WHEELS Wheel Assembly Instructions

For Large Totes, Extra-Large Totes and Tote Spill Kits

NOTE: The wheel kit is located inside of the tote, or in a separate box. If the wheels are to be installed onto a loaded unit, make sure that the lid is secure to ensure that the contents do not spill during installation.

Check the contents of the kit prior to installation. If any pieces are missing, please contact ENPAC LLC at 1-800-936-7229.


Contents:

- (16) 5/16" - 18" x 1.25" Bolts
- (16) 5/16" Washers
- (2) Fixed Casters
- (2) Swivel Casters

STEP 1: Assemble similar casters (swivel or fixed) onto the same short side that the unit will be pushed from.

Swivel Casters

Fixed Casters

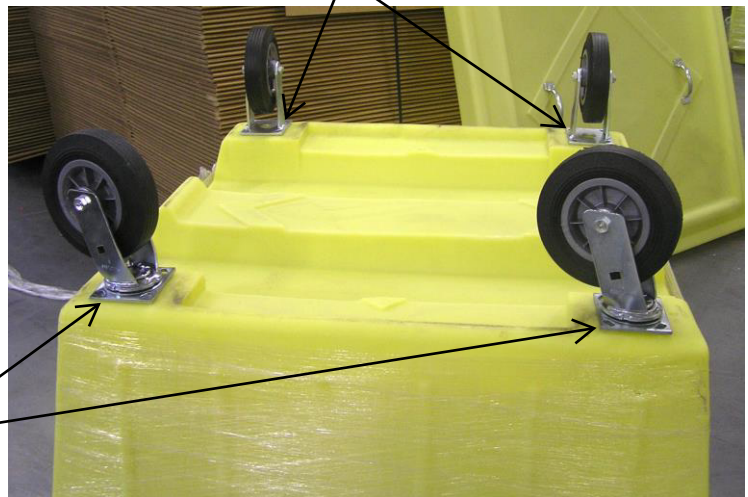

STEP 2:

Use (1) bolt and (1) lock washer per hole to attach the caster to the threaded inserts in the bottom of the tote. Tighten down with 1/2" wrench.

