




Instructions for 48-BRK-DLX-12 / 8

Berm Stay Removal and Replacement Procedures:

1. If the existing stay is still attached (sonic welded) cut the weld and pull the old stay out.
2. Pull the replacement stay up the (vertical) wall. After completing this step, the stay must be welded or permanently attached to the wall.
3. As shown in the accompanying photos below the stay is inserted in the skirt pocket on the horizontal plane. This is the proper configuration.

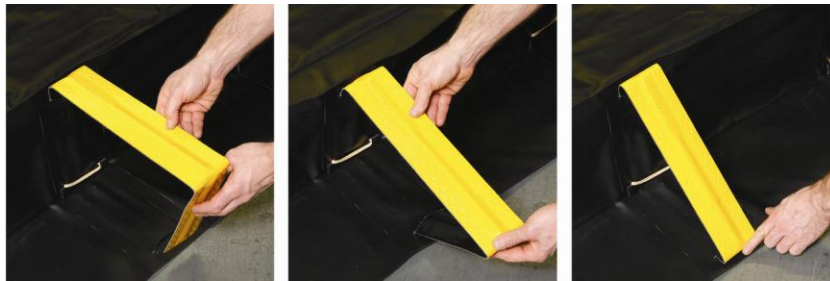

Berm Repair Procedures:

Small Cuts & Tears repaired using the temporary Peel & Stick material:

- Small tears and cuts can be repaired with the peel and stick material. Cut the material 2" wider than the damaged area.
- Clean the area thoroughly.
- Peel the backing off the repair material and force the air out of the area from the center to the outside of the damaged area using the supplied roller or other tools.
- The backside should be repaired if possible in the same manner.

Larger Repairs:

Using the heat gun and fabric:

- Cut the repair fabric 2" wider than the damaged area.
- Clean the area thoroughly.
- Heat the damaged area with the heat gun on max setting.
- Place the repair material on the damaged area and work from the area outward. Force the air out of the area from the center to the outside of the damaged area using the supplied roller or other tools.
- Insure that the area is sealed on all edges.
- Repeat on the other side.